

# Quilt Installation Instructions


These installation recommendations consist of common-sense practices for installing millwork and similar products. Installers should rely upon their own professional experience and understanding of their unique requirements to be the best guide to a successful installation.

## Tools Needed


Bar level or laser level  
Chalk line  
Drill  
Tape measure  
Wall screws appropriate for wall type (not included)

## Components

- A** Top-Left Panel(s) with Z-Clips + Aluminum Plates pre-installed
- B** Top-Middle Panel(s) with Z-Clips + Aluminum Plates pre-installed
- C** Top-Right Panel(s) with Z-Clips + Aluminum Plates pre-installed
- D** Middle-Left Panel(s) with Z-Clips + Aluminum Plates pre-installed
- E** Middle Panel(s) with Z-Clips pre-installed
- F** Middle-Right Panel(s) with Z-Clips + Aluminum Plates pre-installed
- G** Bottom-Left Panel(s) with Z-Clips + Aluminum Plates pre-installed
- H** Bottom-Middle Panel(s) with Z-Clips + Aluminum Plates pre-installed
- I** Bottom-Right Panel(s) with Z-Clips + Aluminum Plates pre-installed
- J** Mounting Blocks with Z-Clips pre-installed
- K** Mounting Block Map



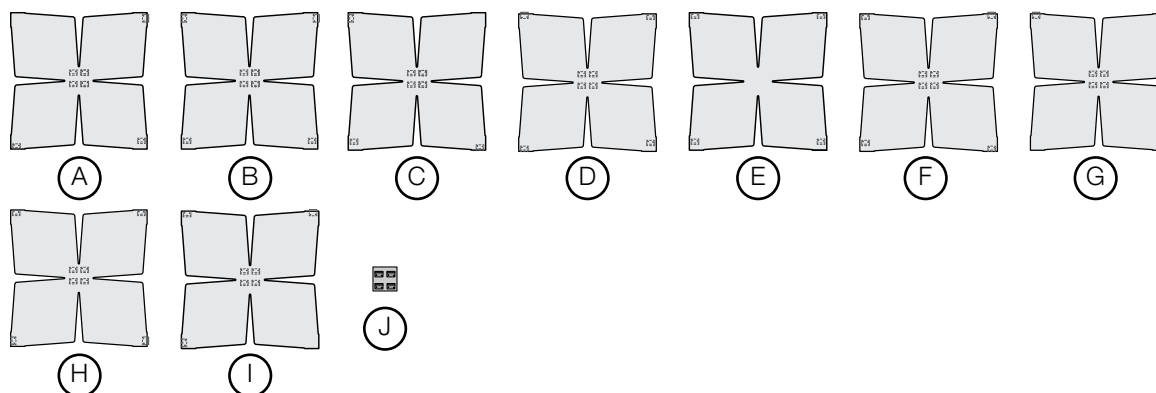


## Installation Example

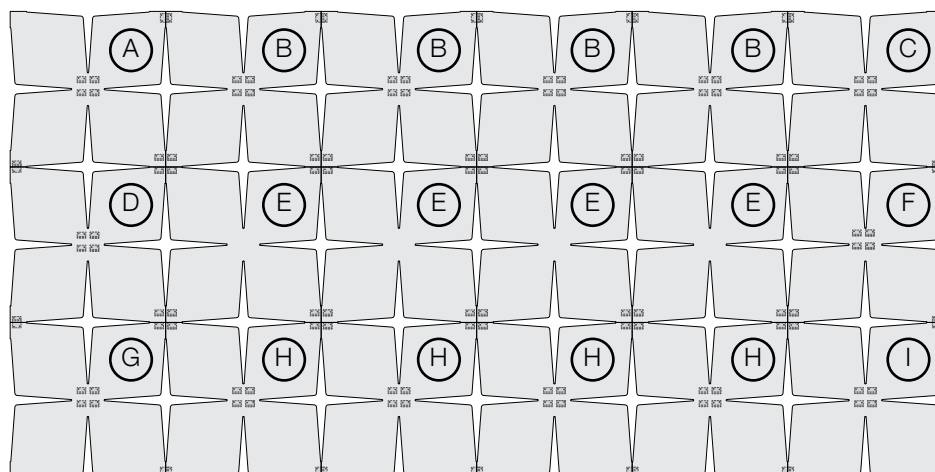


## Installation Instructions

- 1 Handle the panels individually and with clean hands to reduce the possibility of damage during installation.
- 2 Inspect the panels. Wood veneer is a natural material color and texture variations even within the same tile are a normal aspect of this product. It is advisable to inspect for these irregularities and plan the layout accordingly, making sure to disperse any minor color and grain variation evenly. In the case of product defect or damage in transit, Spinneybeck must be notified within five (5) business days. Spinneybeck cannot accept a return or warranty claim on any material that has been installed.
- 3 Clean the work surface. It should be smooth, dry, and dust free to allow the best possible installation. A Level 4 Finish wall preparation is sufficient.
- 4 The Z-Clip hanging method is much like hanging a picture on the wall. The clips allow the panels to be easily lifted off or set on the wall. **IMPORTANT:** A clearance of 1" (2.5 cm) from the top of panels to the ceiling is required to lift and lock Z-Clips.
- 5 Mounting Blocks (J) are located 3'-0" (91.5 cm) on center in the interior of an installation. Measure the Mounting Block locations according to the Mounting Block Map (K) and set laser level or snap chalk lines on wall at measured heights and ensure they are level.
- 6 Secure Mounting Blocks (J) to wall with appropriate wall screws (not included) in pre-drilled holes. Align to laser level or chalk lines. **IMPORTANT:** It is recommended to screw into studs, blocking, or use appropriate anchors.
- 7 Quilt panels come in nine (9) distinct hardware configurations as indicated on the shop drawing and Mounting Block Map (K) included with the order. A label is located on the back of each panel with letter designation and a numeric wall position. The wall position indicates the row number and panel number (i.e. E 2-3 indicates an E panel in the second row down and third panel from the left.)
- 8 Beginning at the lower left-hand corner of the installation, place the first panel at least 3/4" (1.9 cm) above the Z-Clips on a Mounting Block (J) and slide panel down to engage Z-Clips. Check to be sure all Z-Clips are fully engaged.
- 9 Panels at the perimeter of the installation (A, B, C, D, F, G, H, I) have Z-Clips and Aluminum Plates where panel edges meet to ensure proper alignment. Slide the Z-Clip over the Aluminum Plate of each panel until they engage. The Z-Clip and Aluminum Plate should fit together securely with the seam between panels tight.
- 10 Continue to install panels across the row. Repeat steps 8 and 9 moving across the wall until installation is complete. Panels should slide together to be flush and seams tight between panels.

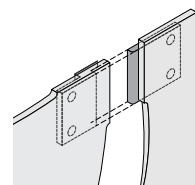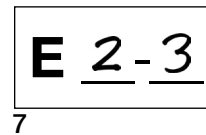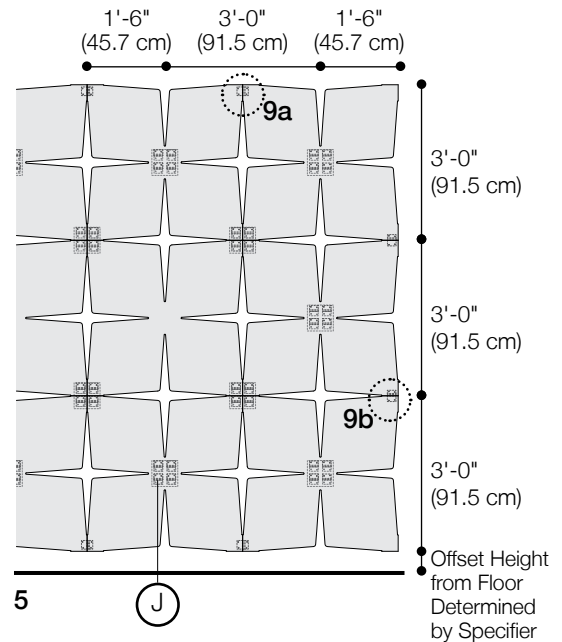

9a

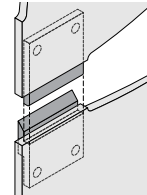

9b

## Cleaning Instructions

Use a very mild non-abrasive, non-ammonia and non-alcohol containing soap diluted in a room temperature water solution. Apply with a soft flannel cloth, followed by a dry cloth. Always wipe in the direction of the grain. Never use commercial cleaners, abrasives, solvents or glass cleaner on any wood components as it will wear away the finish. Never apply wax as this will interact with the finish.

For complete instructions, refer to the Product Maintenance + Cleaning Guide at [spinneybeck.com/cleaning-guide](http://spinneybeck.com/cleaning-guide).