

# Installation and Maintenance

## Tratto

---

### About Tratto

---

Tratto, meaning traction or stretch in Italian, is a unique screen made from stretched CNC cut Belting Leather held in traction within an aluminum frame. Designed by noted architect, Emanuela Frattini Magnusson, the screen acts as an impactful feature wall or space divider in 26 colors of Belting Leather. The leather is sliced and stretched creating sculptural shapes with an interesting play of positive and negative space. The screen affords space separation without blocking light or sight lines and is materially efficient since it stretches the leather to more than twice its length.

### Care and Maintenance

---

Vacuum with a soft brush attachment. Leather cleaners such as saddle soap or household cleaners that may contain harsh chemicals, alcohol or ink removers should never be used.


### Hardware Provided (per screen)

---

Qty: 2      Tension adjustable hardware for floor



Qty: 6      Ball bearing catch hardware for ceiling and frame

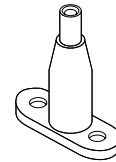


Qty: 8      Self tapping #4 screws



Qty: 4      3'-0" (91 cm) lengths of 1/16" (1.5 mm) stainless steel cable

Qty: 1      Tratto Installation Instructions

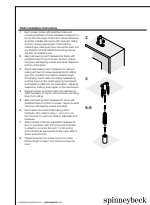

### Hardware Needed (per screen)

---

Qty: 4      #4 ceiling screws (appropriate to building material)

Qty: 2      #12 floor screws (appropriate to building material)

Qty: 2      1/4-20 anchors (concrete floor installation only)

---

## Tratto Installation Instructions

- 1 Each screen comes with predrilled holes and mounting hardware. Frame hardware is spaced 2 in (5 cm) from the edge of the frame unless otherwise specified. Installer will need a drill, level and ceiling and floor screws appropriate to the building material type. Ceiling and floor should be clean and dry. Please note that additional blocking may be required at installation site.
- 2 Align ball bearing catch hardware for frame with predrilled holes in top of screen. Screw to frame using two self-tapping screws (included). Repeat at bottom of the frame.
- 3 Attach ball bearing catch hardware for ceiling to ceiling with two #4 screws appropriate for ceiling type (not included). Cut cable to desired length for hanging. Insert cable into ceiling hardware by pushing down on the center gripping mechanism and threading cable into the mechanism. Adjust as needed by pushing down again on the mechanism.
- 4 Support screen and insert cable into ball bearing catch hardware for frame. Frame should now hang freely from ceiling.
- 5 Insert cable into bottom ball bearing catch hardware.
- 6 Attach socket of tension adjustable hardware for floor to wood floor with #12 screw (not included) or attach to concrete floor with 1/4-20 anchor (not included) as appropriate for floor type. Bolt or screw socket to floor.
- 7 Thread tensioner into socket two turns. Insert bottom length of cable and trim as needed. Adjust tensioner down by hand.

